


Fits following cars:
 Golf5 / Jetta5 / Audi TT2/ A3
 2.0TFSI / 2.5
 2005.5>08 only

VW / AUDI type 5 chassis Pendulum Mount 4 / 5 CYLINDER MODELS (NOT 6cyl)

Fitting notes:

- 1) **WARNING: DO NOT LOOSEN OFF ENGINE MOUNTING BOLTS IF ENGINE IS NOT SUPPORTED FROM BELOW.**
- 2) Support engine from below. Remove factory mount by removing 3 bolts A and B as below. DO NOT WORK UNDER CAR OR KEEP CAR RAISED UNLESS SAFELY SUPPORTED ON STANDS.
- 3) Fit the new VF mount exactly in place of the original mount. All holes should line up and push the polyurethane insert into the factory bushing in the subframe until it is evenly seated. Place small washer provided in recessed hole in polyurethane and larger washer over the small washer. Refit bolt B as listed below.
- 4) ENSURE YOU INSTALL THE ALUMINUM VF WASHER BETWEEN THE POLY AND THE UNDERSIDE OF THE TRANSMISSION AT POINT C (in pic below)
- 5) Refit bolts A and torque as listed below.
- 6) Check torque settings after 200 miles. IF IN DOUBT CONSULT WORKSHOP MANUAL / VF-TECHNICAL. DO NOT INSTALL THIS PART WITHOUT USING A TORQUE WRENCH.

Bolts A - Mount to transmission bolt 40Nm (30 ft-lbs)
 Bolt B - Mount to subframe bush 100 Nm (74 ft-lbs) (not supplied)

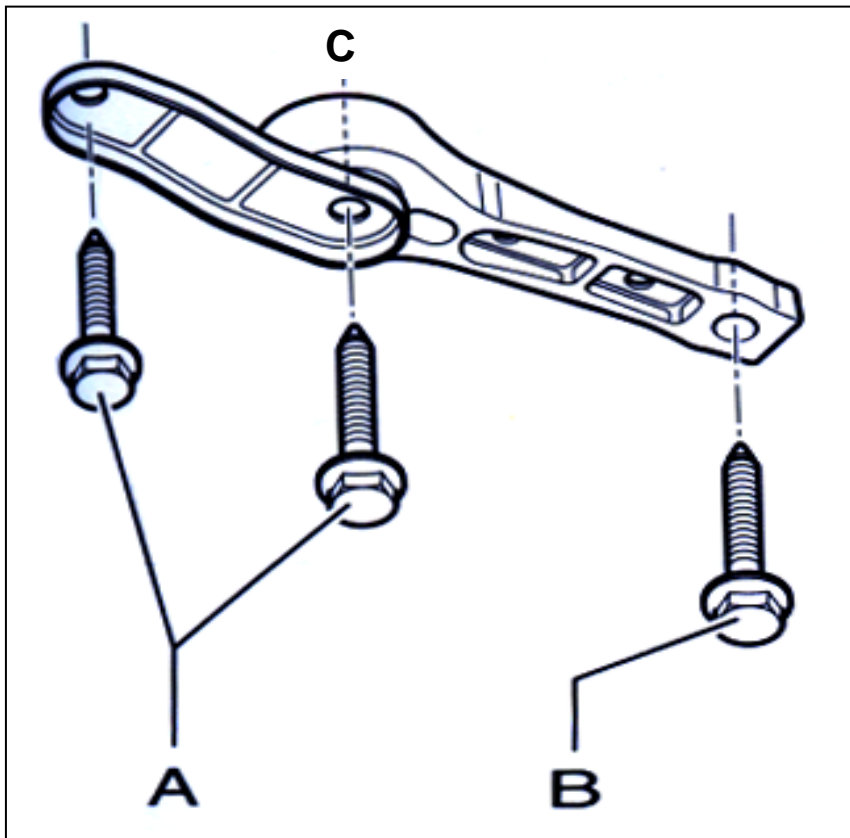

Warranty: 12 months or 12,000 miles whichever occurs sooner on defective VF parts only. No liability is accepted for consequential damage/ cost, misused or misfitted parts. For off-road use only. If in doubt do not fit part and consult retailer.

	MANF BY	Zurich Engineering, Inc.
	12 JUL 06 10/13/09 rev	
TOLERANCE		www.vf-engineering.com
DRAWN	MFG ENG	VF PART #VFA06-01

THE PRODUCT AND INFORMATION SUPPLIED IS THE SOLE PROPERTY OF ZURICH ENGINEERING, INC. ANY REPRODUCTION IN PART OR WHOLE WITHOUT THE WRITTEN PERMISSION OF ZURICH ENGINEERING, INC. IS PROHIBITED.